

Trunk Lids


55-2 Trunk Lids Front Trunk Lid

FRONT TRUNK LID

CAUTION--

- Do not switch on windshield wipers with the front trunk lid raised. As a precaution, remove wiper motor fuse. See 97 Fuses, Relays, Electrical Component Locations.
- Trunk lid is heavy. Before removing trunk lid supports, have an assistant support the lid.
- The body is painted at the factory after assembly. Realignment of body panels may expose unpainted metal. Paint all exposed metal surfaces once work is complete.

Front trunk lid components

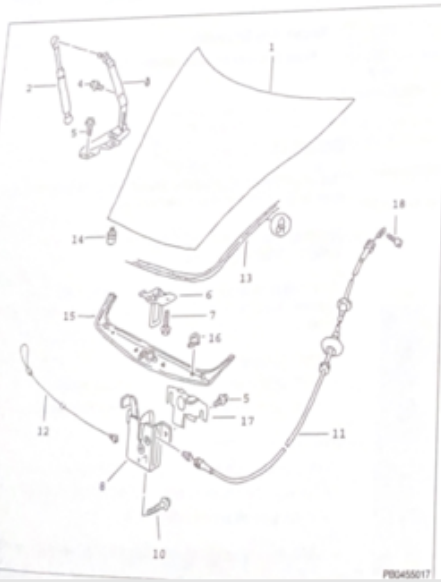

1. Trunk lid
2. Trunk lid strut
3. Hinge
4. Bolt M6
5. Bolt M6
6. Striker
7. Bolt M6
8. Latch, mechanical (1997 - 2000)
9. Latch, electrical (2001 - 2004) (not shown)
10. Bolt M6
11. Bowden cable (1997 - 2000)
12. Emergency release cable
 - Located in right front fender
13. Trunk gasket
14. Bump stop
15. Trim
16. Trim fastener
17. Latch plate
18. Bolt M4

PI0455017