


# 55 37 19 Removing and installing filler flap - as of MY 2005

- Removing filler flap

- Installing filler flap

## Tools


Designation	Type	Number	Explanation	
removal tool, universal	commercially available tool	NR.21		

[top of page](#)


## Removing filler flap

### Removing filler flap

#### Installation Location:

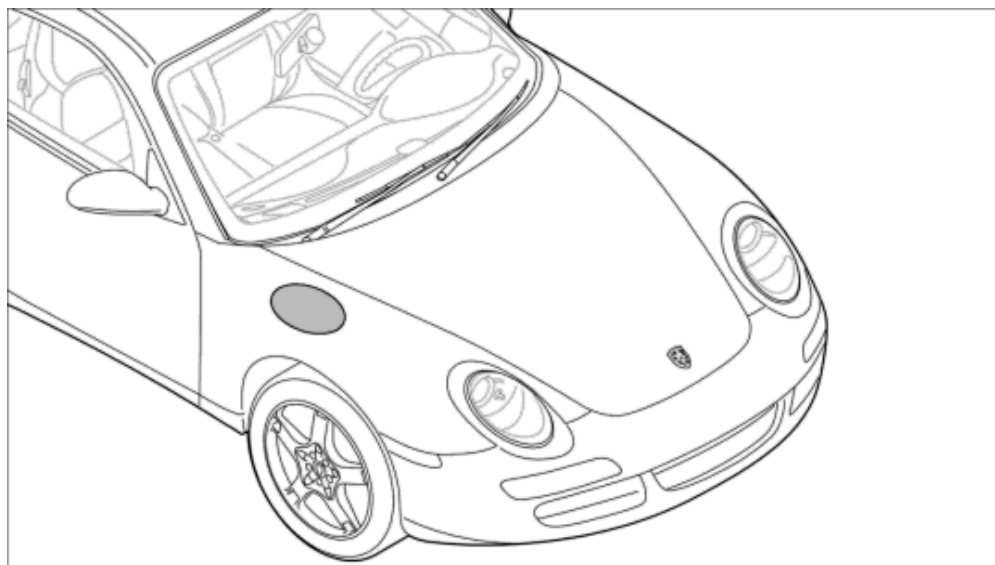


*Overview, removing and installing filler flap*

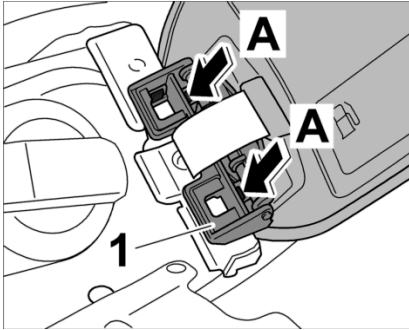

*Removing filler flap*

1. Press the clip **-A-** on forwards from above with a narrow screwdriver.

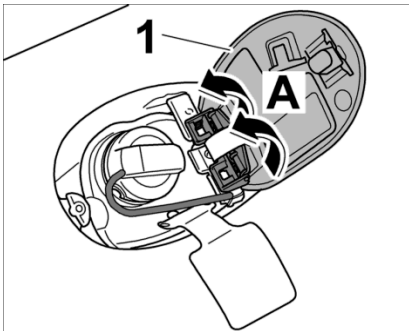

*Pulling off filler flap*

2. Press fastening lug in **-direction of arrow A-** and hold.
3. Pull filler flap **-1-** carefully in an upward direction.

## Removing plastic hinge

### Installation Location: